DOCUMENT MODIFICATION REQUEST (DMR)

Page 1 of 2

Refer to 1-A01-PPG-001 for Processing Instructions. 1. Date 1. Date 01/25/9					1. Data 01/25/94	25. DMR. No. 94-DI	400 133	
2. Bristing Document Number/Revision				3 New Document Number				
4-E42-ER-OPS-GT.08, Rev. 3				Revision N/A		Ŭ		
				7.5				
4 Originator's News/Pross/Proje/Location IR R 01/26/94, Bill Ficcoloman Gregg Anderson/8504/NA/080				5 Document Title Surface Soil Sampling				
<u> </u>								
□ Other □ New □ Revision ☑ Intent Change				Intent Change	_	Editorial Correction (☐ Cancellation	
S. Hean	9 Page	10. Step				Proposed Modifications		
			Note: The Scope Limitation for this DMR is OUs 8, 9, 10, 12, 13, 14 (Industrial Area					
			OUs) for unpaved radiological and non-radiological surface soil sampling.				•	
1		_						
	6	Sec.				description will b	•	• 1
		4.0	•	_	•	C.S. and Munsell		1
			B	-	_	cteristics will be		ne field log book
			and on th	ne Surface Soil S	Sampling Field	Activities Report:		
						ravel, sand, silt, o	clay, etc.)	
				size (based on 1				
			8	(based on Muns		•		(
			8	ng (based on U.		•		
			_	arity (very angu	•	•		
				ure content (dry	•	-		
			 Organ 	ic content (i.e.,	abundant roots	, peat, etc.)"		
2								
	9	Sec.	_		•	•	_	ine the amount of
		4.2.1	accumulated plutonium that has been deposited on the ground, and if nonradionuclide					
			contaminants have been deposited on the ground." DOCUMENT CLASSIFICATION REVIEW WAIVER					
								SIFICATION OFFICE
			dification, EIOI,			15114	ILINE 11	1991
				ed that all surface soil se unce Letter: G.W Beug		Method, and CDH has rec	commended collecting 5	subsamples with the RF
Medico	I MILLION CON			ag Methodology for Ind				
				emples to be collected, t a GT.1 would be extrem		on procedure required by	GT 1, and the similarity	of surface souls in the
			-		• •	4 and 15. If modification is for an	type of change or a capabilities	a crussinations are firthed in Block
13, ten Cr	maurer pri	nto, and signs i	la Blook 14, and de					
13. Organi		14. Print and Bruce Pete	Na (f splast)	1				15. Date (If applicable)
EOM			orman (S	9/0				01/28/94
RE		Dick Nort		Maryel -	7. 57 5 7	10-10		01/26/94
H		Lusa Nelo		Anadura and		مامد		1/28/94
EOS	7 5,4/10 = 1720/77							
SME/FSE M Z Litaor MARKAL W/O-								
16. Originator o Supervisor (print/sign/dain) Class Anderson (PSOA)090								
17 Anigued SME/Phom/Page/Loosies 18. Cost Countr 19 Charge Number 20. Requested Completion Date 21 Effective Date 20.7 Teleph/Loosies 20.1/2.1/94					21 Effective Date			
22. Acutement Review? 23 ORC Review 02/ 04/ 94					02/04/94			
Yee D No # ORC Review Not Required								
BD Poterman Must 101/28/94 REVIEWED FOR CLASSIFICATION/UCNI								
			- /	•		ВУ		K CLASSIFICATION/UCNI

Refer to 1-A01-PPG-001 for Processing Instructions
Print or Type All Information (Except Signatures)

25.
DMR No. 94-DMR- 000133

2 0 3 1	000	Number/Rev	3 Decement Title				
			08, Rev. 3	Surface Soil Sampling			
S. Item	9 Page	10. Step	11	Proposed Modifications			
3	9	4.2.1	Substitute "Five" for "Ten" in the last so	entence.			
4	11	4.2.4	Substitute "Five for "Ten" in the first sentence.				
5	11	4.2.4	Change second sentence to read: "Samples should be collected at the center and corners of one, 1-meter square template, centered on the selected sample site."				
6	12	4.2.4, Step 4	Change to: "For radiological samples, remove soil samples from the jig interior with scoop/trowel and place it in a 10-mesh metal sieve that has a plastic bag attached to the bottom to receive the soil that passes through the sieve. For nonradiological samples, remove soil samples from the jig interior with scoop/trowel and place it in a 10-mesh stainless steel sieve which is placed in a stainless steel pan. After all 5 samples (5 samples from the one 1-meter square templates) have been placed into the sieve, attach the sieve cover and seal with tape. Sieving may be done in stages if all 5 soil samples cannot be placed into the sieve at the same time."				
7	12	4.2.4, Step 6	Replace the 4th through 7th sentences with: "Mix each quarter thoroughly with a scoop/trowel. Roll the quarters back together and smooth to a uniform thickness in the stainless-steel pan. Collect adequate sample volume in appropriate laboratory designated sample container(s) with stainless steel scoop/trowel by making an "S" motion through the composited soil."				
8	13	4.2.4	Replace with: "Place residual sieved so disturbed area."	il from quartering and sampling back into original			
9	13	4.2.4	Delete Step 8.				
10	38	Fig. GT.8-	Replace Figure GT.8-3.				

12 Justification (Reason for Modification, EJO#, TP#, etc.)

Item No. 9 - Long-term storage (greater than 90 days) of potentially contaminated soil could present several regulatory issues. The need for additional sample at a later date would be better served by returning to the sample location and collecting another sample.

SURFACE SOIL SAMPLING

EG&G ROCKY FLATS PLANT Manual: 4-E42-ER-OPS **ERM OPERATIONS PROCEDURE** Procedure No. GT 08,Rev 3 MANUAL 1A of 44 PR 0/31/94 Page: **Effective Date:** Organization **Environmental Restoration Management** LIST OF EFFECTIVE PAGES 94-DMR-000133 EFFECTIVE DATE 0128194 0128194 0128194 0128194 0128194 94-DMR-000133 94-DMR-000133 94-DMR-000133 94-DMR-000133 94-DMR-000133 11 39

Total Number of Pages: 44

SURFACE SOIL SAMPLING

EG&G ROCKY FLATS PLANT

Manual:

4-E42-ER-OPS

GT.08,Rev.3

MANUAL

Page:

6 of 4-RR **/81/94

Effective Date:

Organization:

Environmental Restoration Management

Field personnel are referred to procedure FO.13, Containerization, Preserving, Handling, and Shipping of Soil and Water Samples for further details. Above-surface plant parts and coarse material (pebbles, rocks, and stones) will be removed by the sampling team. The soil samples will be classified according to precedure GT.1, Logging Alluvial and Bedrock Material.

Will be precedure CT.1, Logging Alluvial and Bedrock Material.

ACCESTOR DE L'ARGE TRESSERVE DE LO EL MINIME EN COMMUNICATION DE L'ARGE DE L



For surficial profiling samples, the sampler will collect representative samples, including organic material and coarse material. All sampling equipment will be protected from the ground surface with plastic sheeting.

4.1 SOIL SAMPLING WITH THE CDH METHOD

4.1.1 Introduction

The CDH sampler is one method for collecting soil samples for radionuclide analysis at the RFP. The CDH sampler was designed to sample radionuclides in the top-soil that could become resuspended in the air and thus pose a migration pathway by inhalation. The sampler is designed to obtain a sample from the upper surface 1/4 inch deep from an area 2 inches wide and 2 3/8 inches long, as shown in Figure GT.8-1.

Sampling locations will be described in the FSP. Some samples will be composited to obtain representative samples of large areas and others will be single-location samples. Sampling techniques for either type of sample are the same before compositing.

4.1.2 Equipment and Materials

The following is a list of equipment used for radionuclide contaminated soil sampling:

SURFACE SOIL SAMPLING

EG&G ROCKY FLATS PLANT Manual: 4-E42-ER-OPS

ERM OPERATIONS PROCEDURE Procedure No. GT.08,Rev.3

MANUAL Page: 6A of 44 R.P. DI/SI/4+

Effective Date: 42/8/93 properties 01/28/94 Properties Properties

- CDH soil sampler;
- stainless steel scoop;
- stainless steel lab spoon;
- stainless steel mixing bowl or pan equivalent;
- sample containers;
- sample labels;
- wash and rinse tubs;
- phosphate-free, lab-grade detergent (e.g., Liquinox);
- distilled water;
- plastic sheeting;
- sample locations (map and/or list);
- measuring tape or wheel;

EG&G ROCKY FLATS PLANT	Manual:	4-E42-ER-OPS
ERM OPERATIONS PROCEDURE	Procedure No	GT.08,Rev.3
MANUAL	Page [.]	9 of 44 RR 01/31/94
	Effective Date	12/0/93 K.A.
	Organization:	12/0/93 KA. 01/28/94 Environmental Restoration Management

to pour the soil into the container. Brush any soil that adheres to the scoop into the sample container.

- 9. Close the container.
- 10. After samples are placed in sample containers, the outside of the container will be wiped clean of excess material and it will be placed in a plastic bag.
- 11. Transfer the samples to the sample manager. Refer to procedure FO.13, Containerization, Preserving, Handling, and Shipping of Soil and Water Samples for the proper paperwork and sample transfer methods. This documentation is a QA record and must go into the ERM records center.
- 12. Either use another set of clean sampling equipment or decontaminate equipment after use and between sample locations. For specific decontamination guidelines, consult procedure FO.3, General Equipment Decontamination. Decontamination according to these procedures is not necessary between composite sample points; however, excess dirt or mud should be cleaned from the equipment.

Duplicate samples will be obtained by offsetting the primary sample location 6 inches to 2 feet upwind or in a direction technically more appropriate and placing the duplicate samples in a separate jar. The location of the duplicate will be documented on the data collection form. The duplicate sample will be composited and containerized following the same procedures as for the primary sample. The frequency of duplicate samples will be defined in the FSP or the Quality Assurance Addendum (QAA).

4.2 SOIL SAMPLING WITH THE RF METHOD (JIG AND SCOOP)

4.2.1 Introduction

The purpose of sampling is to determine the amount of accumulated plutonium that has been deposited on the ground and if also action a sample volume of 5,000 cm³ of soil in situ. The jig outlines a square area with 10-cm sides and is driven 5 cm into the soil to cut three sides of the sample (Figure GT.8-2). At the fourth side, soil is removed from outside the jig's perimeter. The scoop is used to finish the cut on both the fourth side of the sample and the bottom surface. Ten-Five samples should be collected at each location and composited.

94-DMR-000/33 94-DMR-000/33

EG&G ROCKY FLATS PLANT	Manual ⁻	4-E42-ER-OPS
ERM OPERATIONS PROCEDURE	Procedure No	GT.08,Rev 3
MANUAL	_	11 of 44 RR 01/81/94
	Page [.]	11 of 44 KK 5//5//
	Effective Date.	12/0/03 RA
	Organization.	12/8/93 RA- 01/28/94 Environmental Restoration Management

4.2.3 Sampling Plot Layout

A site selection plan as described in the applicable FSP should be used to specify the general site location. The plan must provide adequate information for the sample collection crew to locate each specific site. Sample locations will be marked with an identification sign, as designated in the FSP, so that the area may be located and resampled at a later date. Permission to collect samples and mark the site should be obtained from the appropriate EG&G department or the landowner. Sample collection crews will be accompanied by supervision for all sampling activities to ensure that specified procedures are followed.

The following general site selection criteria should be considered:

- undisturbed location for the time interval of interest:
- near the center of a large, flat, open area;
- not subject to excessive runoff during heavy rain;
- light to moderate vegetation and permeable soil; and
- not in an area of mechanical disturbance.

Consideration of these criteria will depend on the nature of the study. For example, in some instances it may be necessary to investigate an area of mechanical disturbance.

If a sample site is not available that meets the criteria described in the FSP, the location can be moved up to one-half the distance to the next grid sample location or within 10 feet of a staked sample location which is not part of a grid.... If the sample location must be moved further than this distance, regulatory agency concurrence will need to be obtained. Any movement of sample locations will be documented on the surface soil data collection form and in the field crew supervisors logbook.

All selected sites should be located on a map.

4.2.4 Procedures

Ten-soil samples should be collected at each site and composited for analysis. Samples should be collected at the center and corners of two one meter equares that are spaced one meter apart one. For equal templetes consists at the selected site. Figure GT.8-3 illustrates this sample collection spacing. The following procedures will be used for the RF method:

44. DMR-000/33

EG&G ROCKY FLATS PLANT

Manual:

4-E42-ER-OPS

GT.08,Rev.3

MANUAL

Page:

12 of 44 RR 01/31/94

Effective Date:

Organization:

Environmental Restoration Management

- 1. Place the sampling jig on the ground, and using the wood block and hammer, drive the jig into the soil to a depth of 5 cm.
- With minimal disturbance to the soil inside the jig, use a scoop, trowel, or chisel to remove the soil from around the open side of the sample jig.
 Soil should be removed to a depth that will allow easy removal of the sample.
- 3. Discard the soil removed from outside the jig.
- with scoop/trowel and place it in a 10-mesh metal sieve that has a plastic bag attached to the bottom to receive the soil that passes through the sieve.

 After all 40 samples (5 samples from each—of the two—self-meter square templates) have been placed into the sieve, attach the sieve cover and seal with tape. Sieving may be done in stages if all 40 soil samples cannot be placed into the sieve at the same time.
- 5. Label the sample container into which the soil sample is to be placed. Refer to procedure FO.13, Containerization, Preserving, Handling, and Shipping of Soil and Water Samples, for the type of information to be included on the label, and the appropriate type of container.

This documentation is a QA record and must go into the ERM records center.

Shake the sieve for several minutes. If the soil is moist, gently crush soil aggregate with fingers, while wearing proper personal protective equipment as prescribed in the applicable Health and Safety Plan, and continue shaking until all soil matrix has passed through the sieve. Discard large particles (cobbles, stones, etc.) that do not pass through the sieve into original disturbed area.

ERM OPERATIONS PROCEDURE MANUAL

Procedure No.

SURFACE SOIL SAMPLING

GT.08,Rev.3

Page:

12A of 44 KR 0/31/94

Effective Date:

Organization:

12/8/98 K.R. 01/29/94 Environmental Restoration Management

6. In order to reduce the volume of the sieved sample to the quantity required for laboratory analysis, and still maintain a representative sample; place all sieved soil into stainless steel pan. Mix soil thoroughly with a scoop/trowel. Divide sieved soil into quarters. Subsample each quarter equally so the total amount of subsampled soil to be used for analysis does not exceed 1 kg or one 1 gal paint sen. Place each of the four subsamples into one plastic bag. Place plastic bag in motal 1 gal paint can.

Leave about 1 inch headspace in paint can.



EG&G ROCKY FLATS PLANT	Manual:	4-E42-ER-OPS
ERM OPERATIONS PROCEDURE	Procedure No.	GT.08,Rev.3
MANUAL		41 1 1
	Page:	13 of 44 01/31/94
•	Effective Date.	1 2/9/93 pe
	Organization:	Environmental Restoration Management

- 7. Place recidual sieved seil from quartering inside plastie bag, and place bag inside enother paint can. If residual seil exceeds volume of one 1-gal-paint can, place excess residual sieved seil back into original disturbed area.
- 8. Store residual sieved seil for potential use at a later date.
- Decontaminate sieve between uses following procedure FO.3, General Equipment Decontamination.

4.3 GRAB SAMPLING (SPADE AND SCOOP)

4.3.1 Introduction

Surface soil samples can be collected for radionuclide analyses using grab sampling (spade and scoop) methods.

Sampling locations and the number of soil samples will be described in the specific Field Sampling Plan for each project. Equipment, sample plot layout, and sampling procedures are described in the following sections.


4.3.2 Equipment and Materials

The following is a list of equipment for contaminated soil sampling:

- spade (long handle);
- stainless steel hand auger (optional);
- mason trowel;
- **stainless steel scoop**:
- " stainless steel lab spoon;
- sample labels;
- sample containers;
- wash/rinse tubs;
- phosphate-free, laboratory-grade detergent (e.g., Liguinox);
- distilled water:
- plastic sheeting;
- sample locations (map and/or list);
- appropriate health and safety equipment as specified in the applicable.
 Health and Safety Plan;
- photoionization detector (PID) or flame ionization detector (FID);
- logbook;

SURFACE SOIL SAMPLING EG&G ROCKY FLATS PLANT Manual: 4-E42-ER-OPS ERM OPERATIONS PROCEDURE Procedure No. GT.08,Rev.3 MANUAL Page: 39 of 44 or 31/94 Effective Date: 01/29/94 Organization: Environmental Restoration Management

Figure GT.8-3 RF Method Soil Sampling Location Spacing

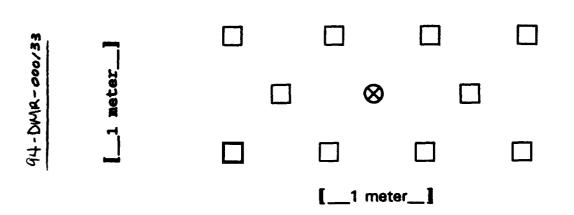

⊗ - Sample Location

☐ - Subsample Location